
Ydea-C5 System

Avrbud Upgrade User Manual


Statement:

1. When avrbud is upgraded, it updates the SCM procedures via the host computer software ;


2.After the upgrade can see on the LCD controller MCU program version of the upgraded ;

1. Open control software :

Realize the software communication between main controller and computer via USB cable. Open YdeaFast (v2.0.5)controlling software and switch to C5C interface. Click "function" and "avrbud upgrade" into the upgrade interface :

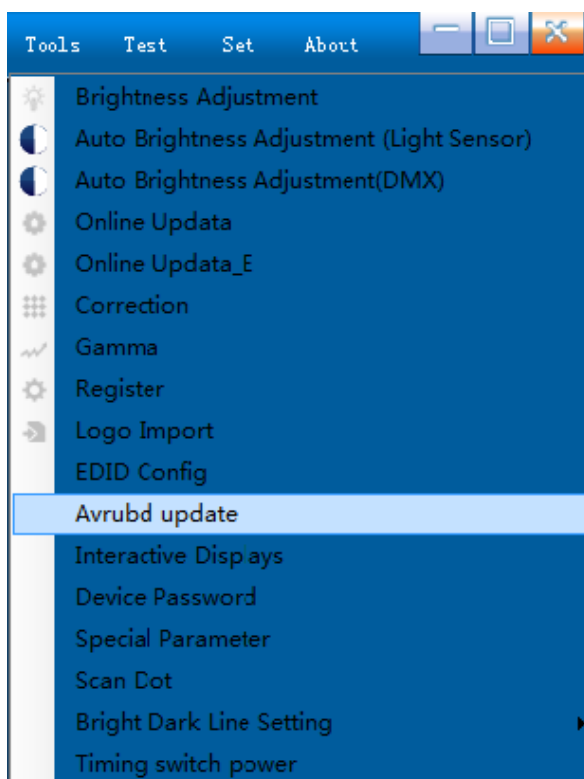

2. Enter into program upgrade main interface :

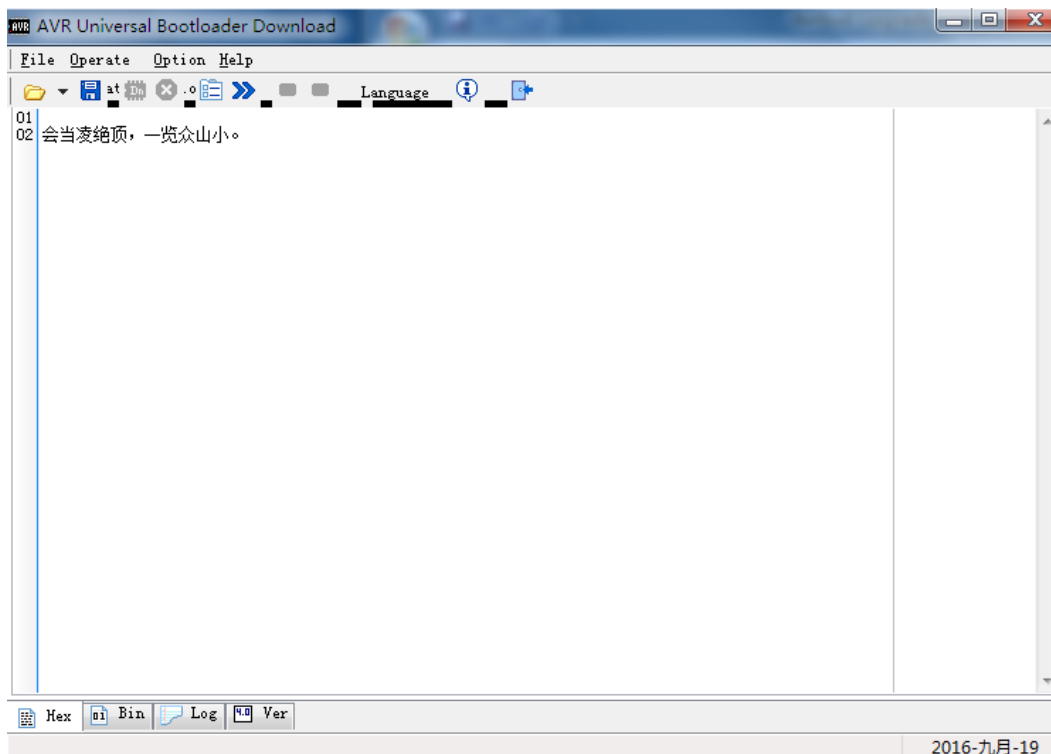


3. AVR and serial port setting :

Click menu **【option】** , choose **【AVR】** , and set the space size in the **interface popping out.**


Attention: upgrade SCM of C2.0, and choose 32K in the Flash space;
upgrade SCM of C3.0and**C5.0**, and choose 128K in the Flash space.

As shown below:

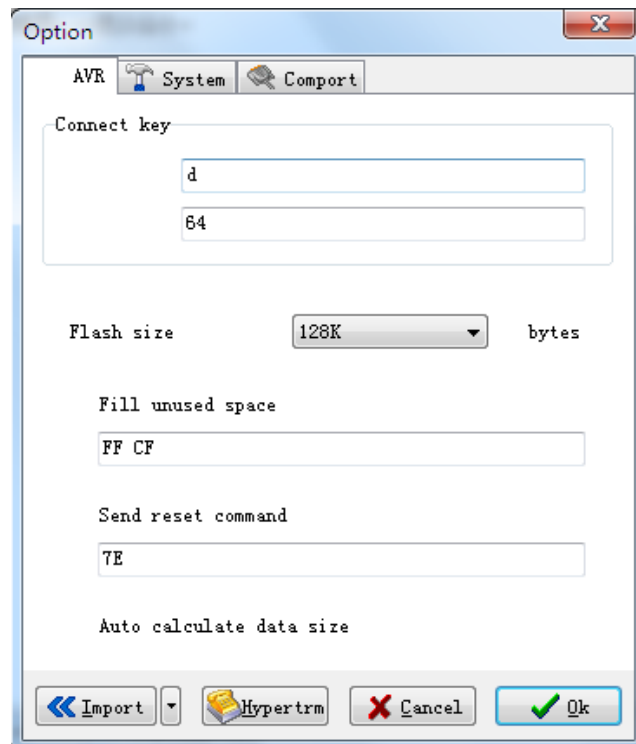

After setting Flash space, click [serial port] in the interface. As shown below, set the serial port and click [Yes] back to main interface :

Attention: when SCM is upgrading, be sure that the serial port connection between main controller and computer is working normally.


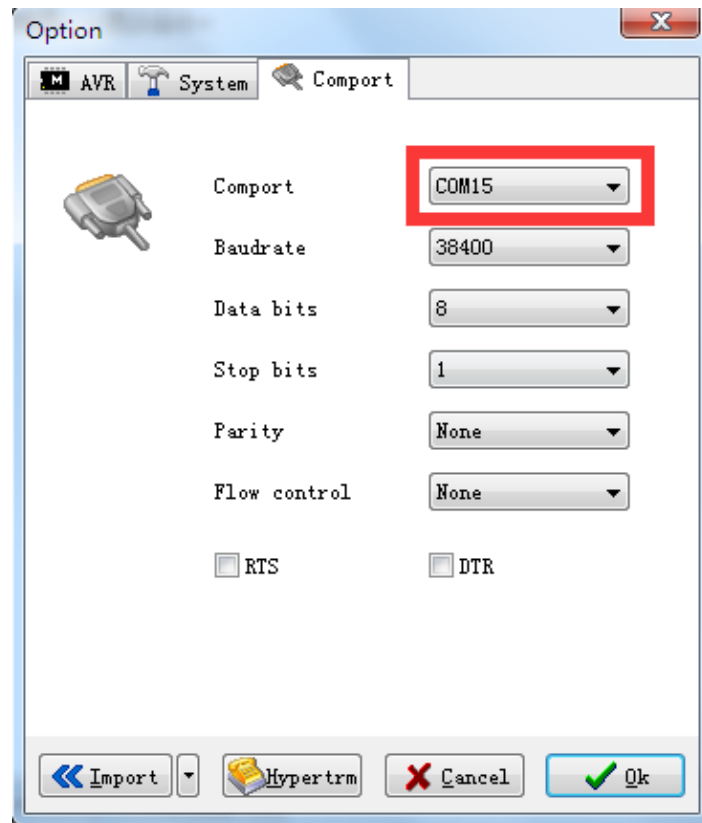


4 .Upload upgrade file :


Click [file] in the main menu, and click [upload] in the drop-down menu.




Choose the file in the interface popping out. Click [open] (the suffix of the upgrading file is .hex).

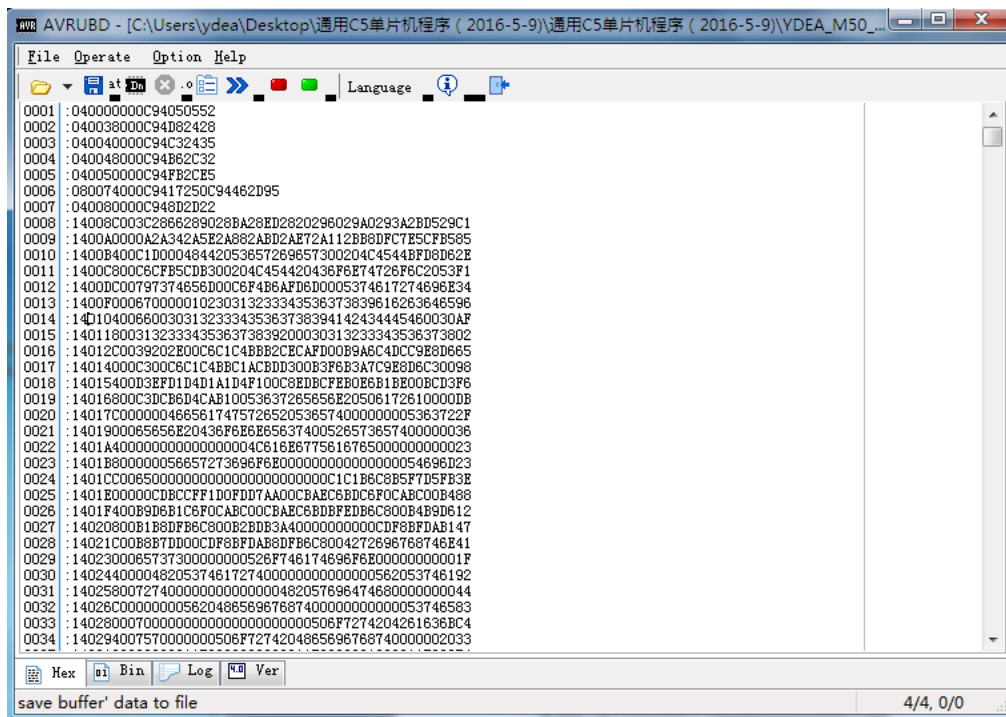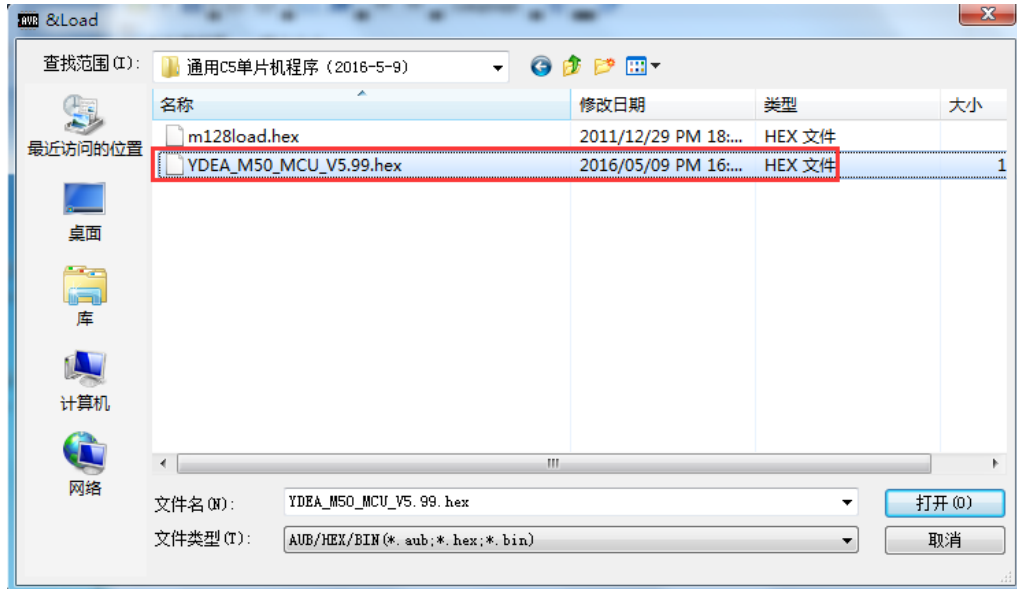

5 Upgrading SCM program

Close the power of main controller first, and click  in tool column, then open the power after 1-2 seconds. At that moment, the main interface should be shown as below:

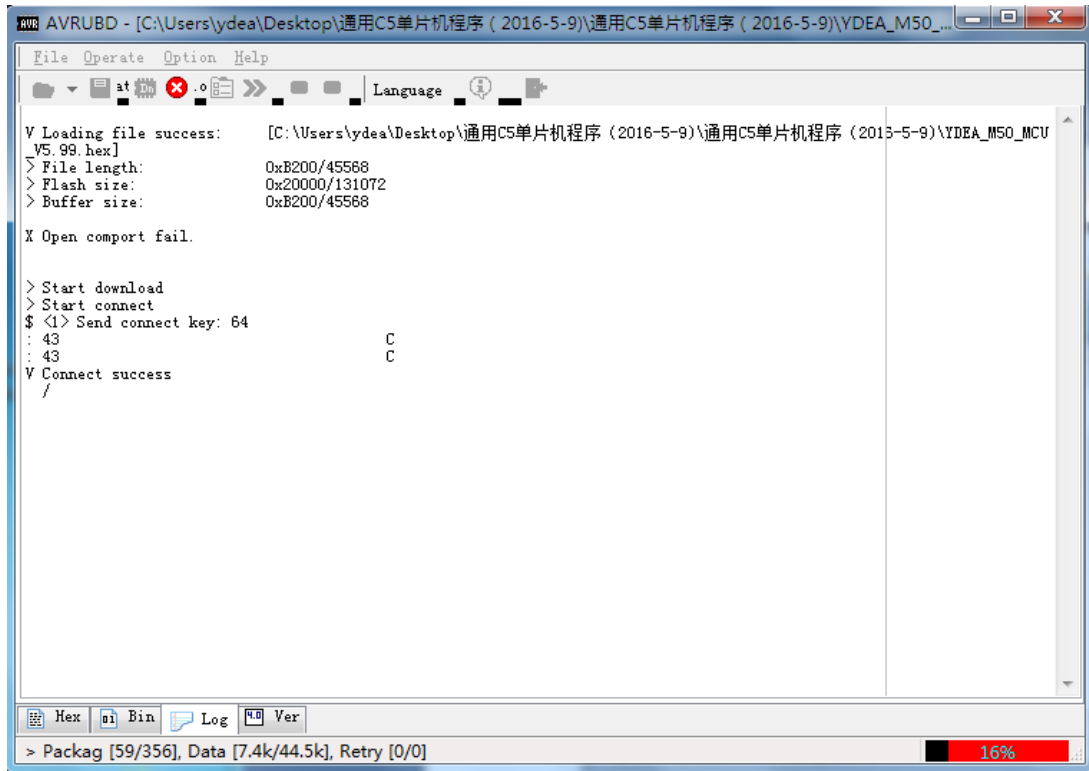

When the progress bar at the bottom right corner reaches 100%, it means that the SCM is upgraded successfully.

