

YClient 2 User Manual

(Android YClient 2)

Version : Rve 1.0.0


Date : 2017-02-08

CONTENTS

1 Software introduction	2
2 Software installation	2
3 Software uninstall	2
4 Software settings and instructions.....	3
5 The screen management.....	5
5.1 The screen list	5
5.2 Add a group	6
5.3 The screen settings.....	7
5.4 System settings	8
5.5 The screen info	10
6 Playback controls.....	12
6.1 Program list.....	12
6.2 File management	14
6.3 Insert word	15
6.4 Program planning	16
6.5 Add program	16
7 Interactive display.....	18
7.1 Persisting effects	18
7.2 Interactive animation.....	18
7.3 Photo editor.....	19
8 My login screen	20
8.1 Me.....	20
8.2 LOGIN.....	21


1 Software introduction

YClient 2 is a software based on the Android terminal to exploit mainly for phone and the tablet,which can implement the mobile device through a LAN or hot spots,and control or choreography. MDEA system as LAN within the cluster management . It can provides a better solution for releasing cluster of the LAN. The basic framework of software as shown below:

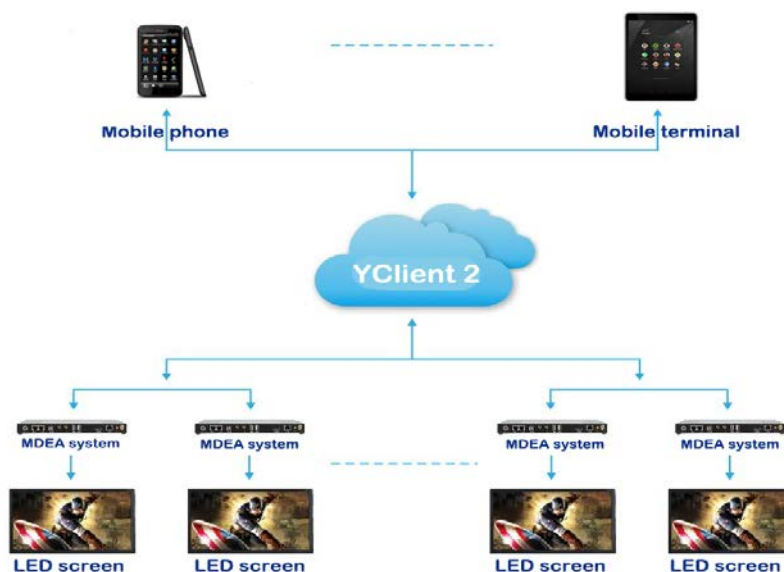

2 Software installation

Log on <http://www.ydeachn.com/> to download Android client YClient2 software , click install package to install or scan the QR to install.

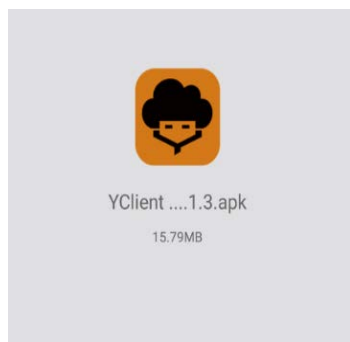


<http://www.ydeachn.com/>

Address:Skyworth innovation valley 5# A layer ,901 Tangtou Road no. 1 on the 8th Shiyan Street
Baoan District Shenzhen City .

3 Software uninstall

Enter the phone setting system,select the application ,the installed APP list appears ,select YClient2 client and click uninstall.

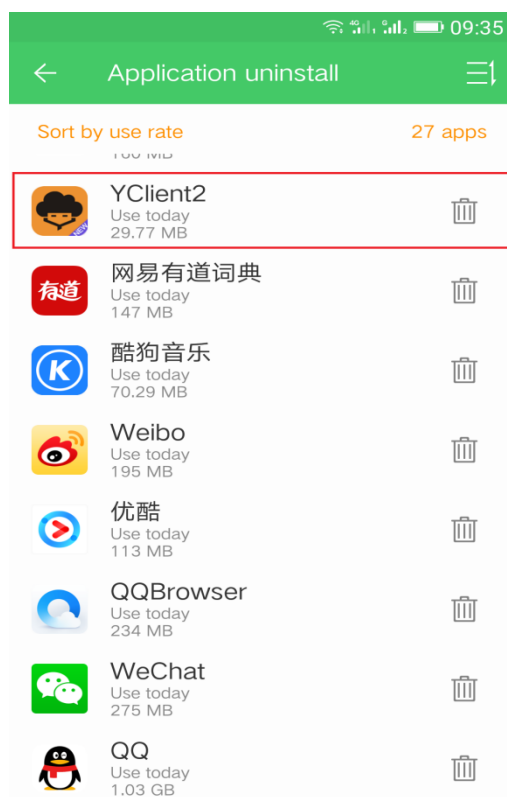


4 Software settings and instructions

4.1 Before log on , the phone connect with the MDEA player' s wifi hot spot(MDEA player' s name defaults xxxx_host)

(Notes : It can also connect the wifi created by a router , t he premise of logging on is that MDEA player and phone connected to the same wifi .)

4.2 When the phone connected wifi successfully , click on the desktop icon to enter the software.

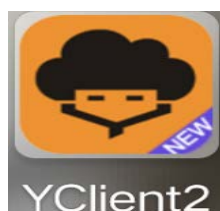


4.3 After you have successfully logged into the software , it


<http://www.ydeachn.com/>

Address:Skyworth innovation valley 5# A layer ,901 Tangtou Road no. 1 on the 8th Shiyan Street
Baoan District Shenzhen City .

will automatically scan and show the wifi hot spots . And display four modules : screen management \ playback controls\ interactive display \me .

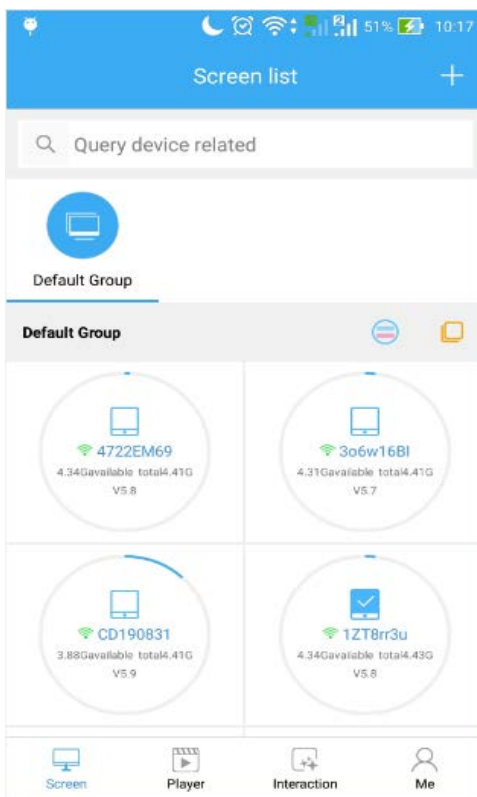

4.4 Click on the device name , enter the password (default 123) , click on "OK" ,landing equipment successful.

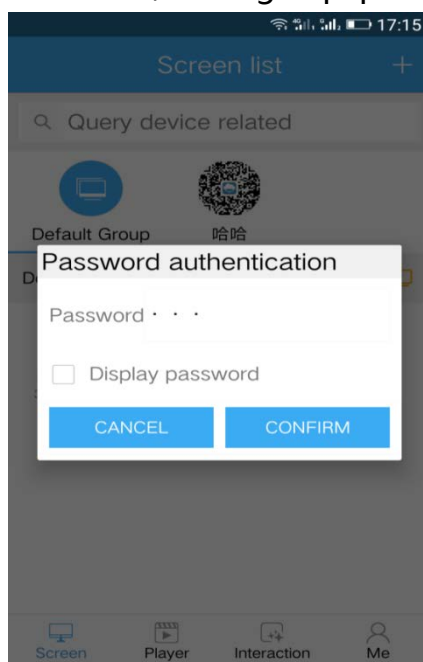


<http://www.ydeachn.com/>

Address:Skyworth innovation valley 5# A layer ,901 Tangtou Road no. 1 on the 8th Shiyan Street
Baoan District Shenzhen City .

5 The screen management

5.1 The screen list

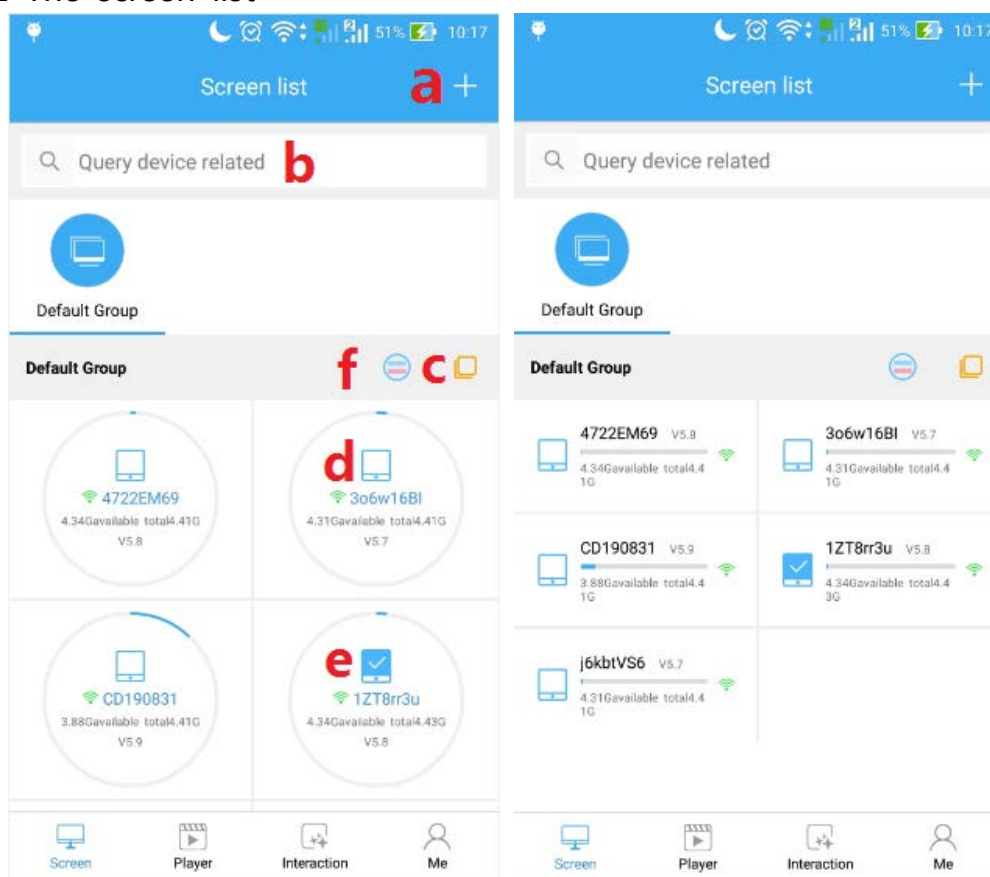

(Picture 1)

(Picture 2)


- a:** Click to enter Add group interface ;
- b:** if group' s classification too much , you can enter a group name to search corresponding group quickly.
- c:** click a key to select all device login ;
- d:** Device unselected , click any area of device can select one;

e: Device selected ;

Notes: Under device selected , click the device' s other are a beside the grid will enter its screen setting interface .

- f:** Click to switch display made , figure 1 and figure 2 swap list made ;

5.2 Add a group

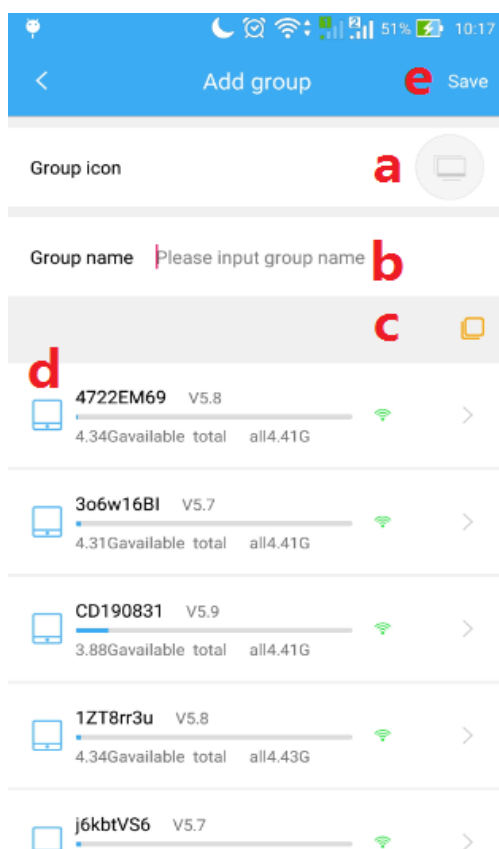

a: Replace the group picture , support photos and local pictures .

b: Edit the group name ;


c: A key to select all devices scan below ;

**Notes : must select one or more than one device ,
Other wise it will warning operated failed.**


d: Basic information of device . Including Name 、 Model、 Available memory .

e: Save , create groups information


5.3 The screen settings

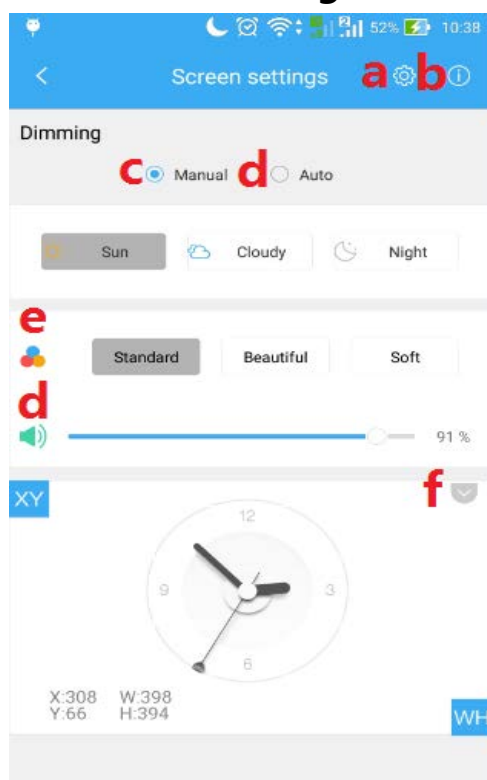

(Picture 1)

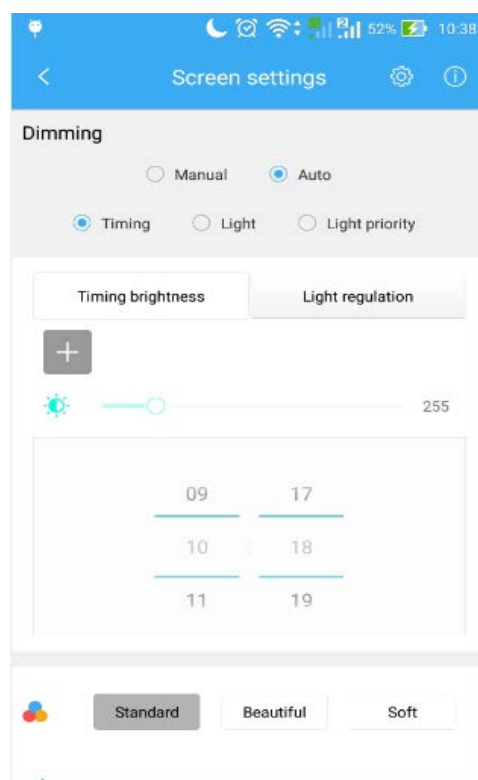


(Picture 2)

- a:** Click to enter system setting interface .
- b:** Click to enter screen information interface .
- c, d:** System provide manual and automatic brightness adjustment .
Manual control provide three default options . Automatically adjust the brightness may adjust timing 、 light program .
Figure 2 is the concrete operations interface : click on  to add a program .
- Timing adjustment :** Use the timing brightness only, do not use light perception
- Light perception adjustment :** Use the light perception only , do not use timing adjustment .
- Light perception is preferred :** Priority in using light perception , if no light perception then use timing brightness .
- e:** Color temperature adjustment : System provide three default options , you can also custom to set correlated color temperature

according you need .

- f:** Click to pop the clock Settings list, and provide 24-hour clock and watch two kinds of style, as well as the time calibration function .

5.4 System settings

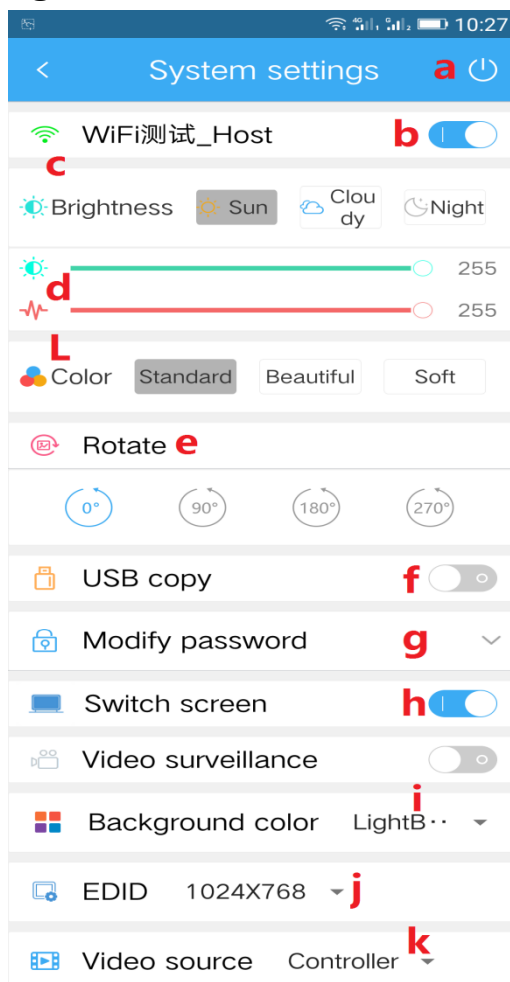


- a:** Click to pop up a list of Shutdown/ Restart/ Timing
- b:** Switch connected to WIFI or hot spots
- c:** Adjust the brightness , return to the previous interface to sand.
- d:** Adjust brightness, returns an interface to transmit
- e:** The play back windows rotation . Including 0°、 90°、 180° and 270° ;
- f:** U disk , the default state is OFF , insert U disk will play U disk files but not copy them; Open state , insert U disk will play U disk files and copy them .

<http://www.ydeachn.com/>


Address: Skyworth innovation valley 5# A layer ,901 Tangtou Road no. 1 on the 8th Shiyan Street
Baoan District Shenzhen City .

Notes : the videos need to play must put in U disk root directory , can not be placed in a folder .

- g:** Click to display a interface of changing user name and password .
- h:** Open or close LED screen on client .
- i:** Background colors options , the default background color is light blue .
- j:** Resolution options . You can modify screen resolution .
- k:** Switch video source options. The video source can be Mdea player or HDMI signal from computer .
- L:** Click to pop up color temperature setting interface , according to needs to modify color temperature program \ level of gray \Gamma value . As below .

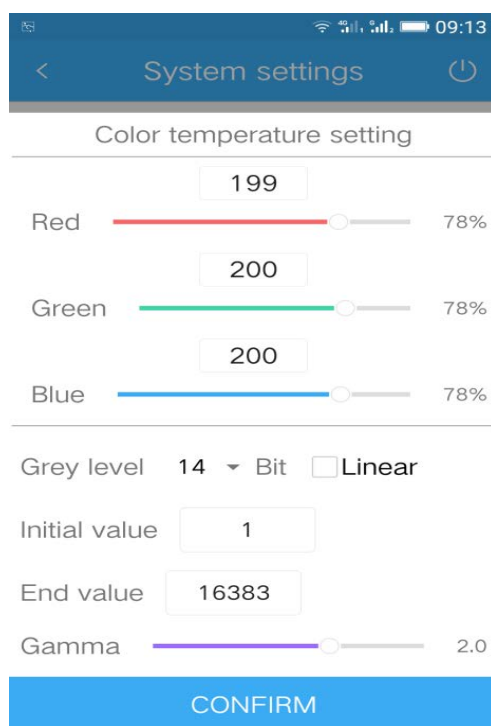

5.5 The screen info

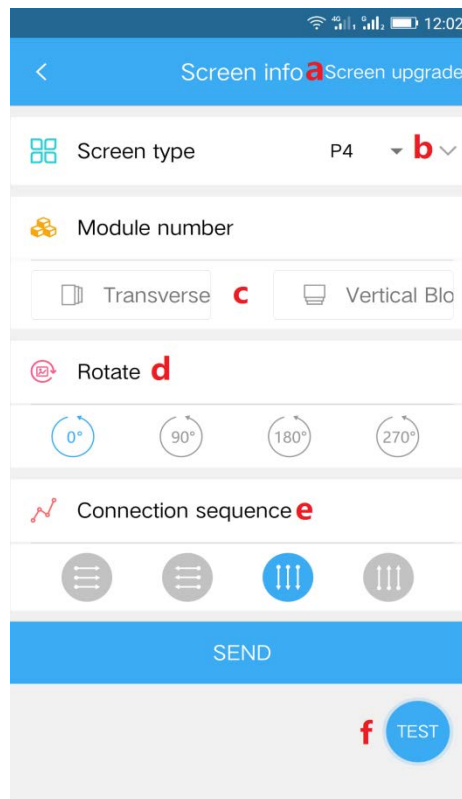

a: There are two ways to upgrade MDEA device-side studio software .

First : Software upgrade , upgrade the version of studio software on the MDEA device .

Second : Firmware upgrade , upgrade the firmware version of MDEA device .


Notes : These two way of upgrading can be read on “YClient 2 screen upgrading operations” ;

b: Click to display a operation program of evening screens . The program including screen type \ horizontal points and vertical points of single screen \ receiving card types .



<http://www.ydeachn.com/>

- c:** Edit quantity of Module , horizontal quantity and vertical quantity of screens .
- d:** Rotation angle of screen .
- e:** Connection order of screen .
- f:** Click to enter screen test interface . Including gray test \ gradient test \ scan lines test \ check position . You can run all the test in sequence .

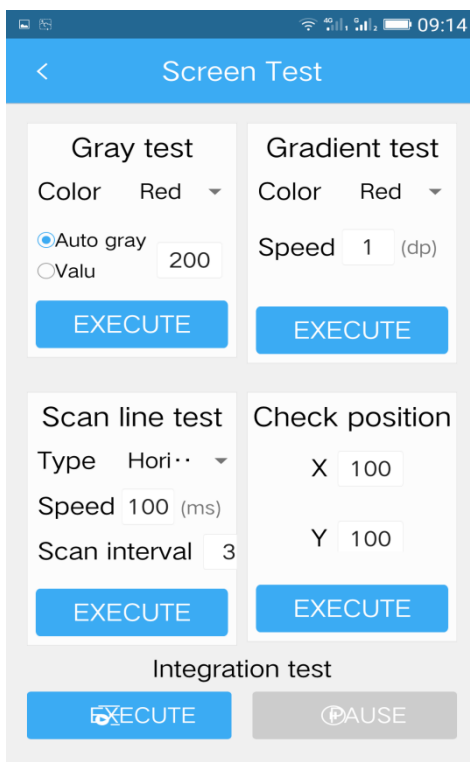

6 Playback controls

6.1 Program list




a: Click to enter File management interface .

b: Click to enter Insert word interface .


c: Click to enter program plan interface .

d: The display window . **d** is under chosen condition , display delete button for deleting windows . Press on the chosen window for three seconds will enter window settings interface . In this interface , you can modify the position and size of window .Send the settings to the device when you finish setting .

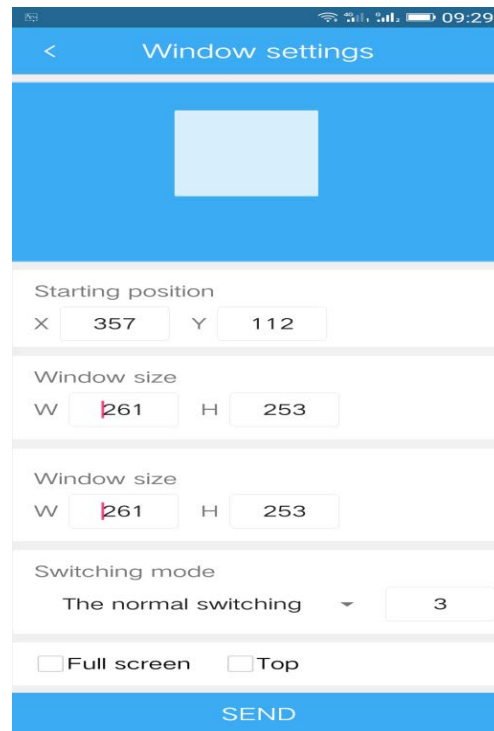

- e:** Add windows . At present for the compatibility of device ,only support to open two windows .
- f:** Play list . Pull-down the play list can refresh the play list .
Drag the program to the left can display preview button .
- g:** Click to delete the chosen program .
- h:** Click to enter sort mode . Press on the sort icon and drag the program up or down can sort the program . Finally click confirm .
- i:** Play mode .Including Looping \ Random play \ Sequential play \ single cycle .
- j:** The broadcast time of each picture .
- k:** Play condition . Control the program to play or pause .
- l:** Volume adjustment .
- m:** The switch animation of each picture .
- n:** Empty the play list .

6.2 File management

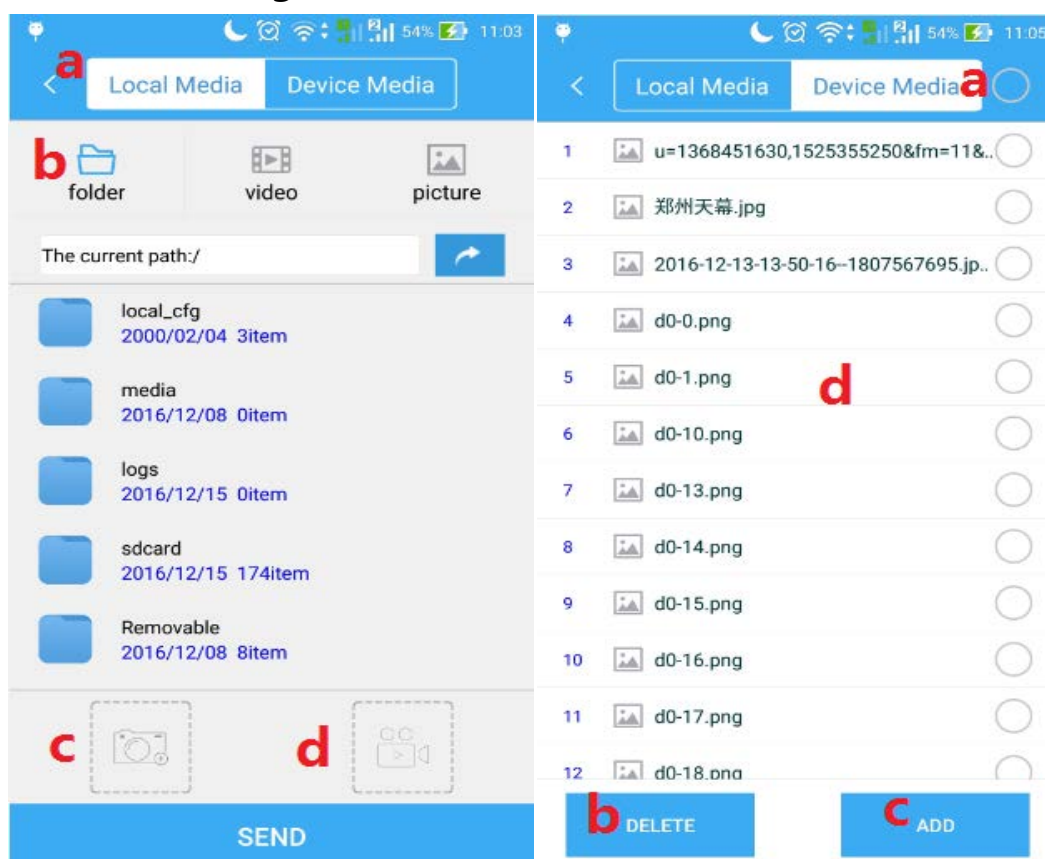

Picture 1

Picture 2


Figure 1 :

- a:** Switch the interface of Local media and Device media .
- b:** Switch the interface of folder \ video \ picture .Choose the files and sand them to device .
- c:** Camera function .
- d:** Video function .

Figure 2 :


- a:** Select all .
- b:** Delete the chosen file .
- c:** Add the chosen file to the play list .
- d:** The file list of device which support to pull-down to Refresh .

6.3 Insert word

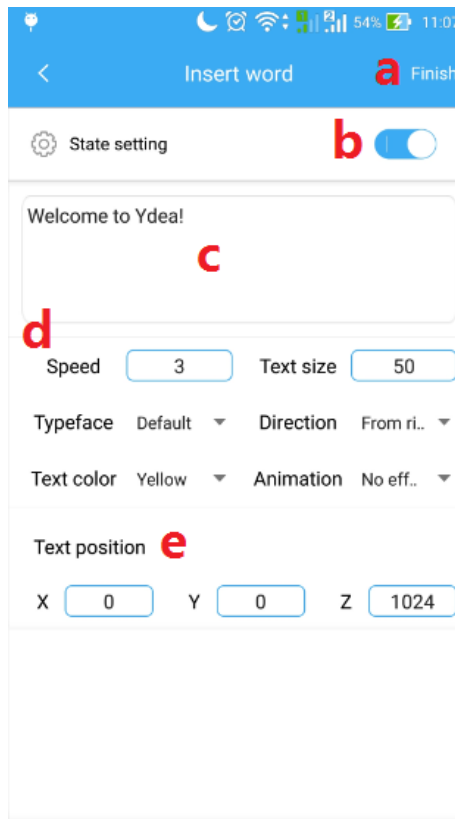


- a:** Completed editing and click on finish to sand the word information to the device .
- b:** State setting .Open to display text on device .
- c:** Text edit box .
- d:** The related properties of insert word. .
- e:** X is word' s starting point of horizontal; Z is word' s ending point of horizontal .Y is word' s vertical displacement .

6.4 Program planning

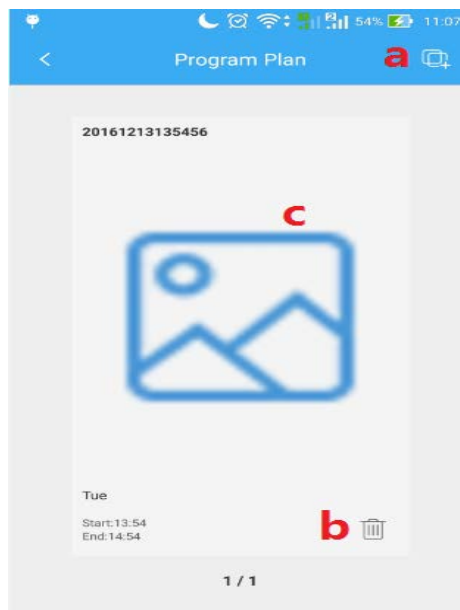

- a:** Enter the interface to add program .
- b:** Delete the current program to finish the timed play program .
- c:** The current program plan .Slide to the left to the next program.

6.5 Add program

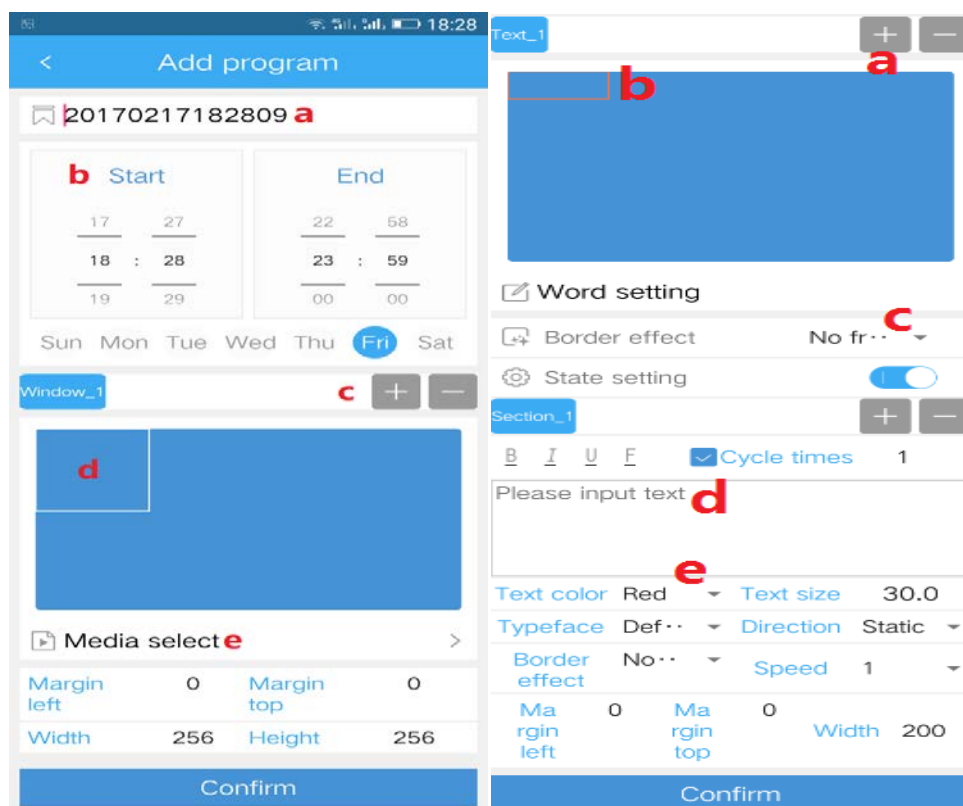

Picture 1

Picture 2

<http://www.ydeachn.com/>

Address:Skyworth innovation valley 5# A layer ,901 Tangtou Road no. 1 on the 8th Shiyan Street **16**
Baoan District Shenzhen City .

Figure 1 :

- a:** Edit the name of program plan . Default named after time.
- b:** Starting time and ending time . The start time is greater than the current time and the end time is greater than the start time .
- c:** Add and remove window modules . Text or media windows .
- d:** The preview of program plan .The windows can be any where and any size.
- e:**Select the media file to play and click to confirm .


Figure 2 :

- a:** Add and remove window modules . Text or media windows .
- b:** The preview of program plan .The windows can be any where and any long .
- c:** Add a border for the edited document
- d:** Click to a interface of text editor .
- e :** Related attributes of the text .

7 Interactive display

7.1 Pre storage effect

The persisting effects include scene effect and custom effect . The scene effect have 5 default animation schemes . The custom effect include pictures editor \ gif \ photos \ video .

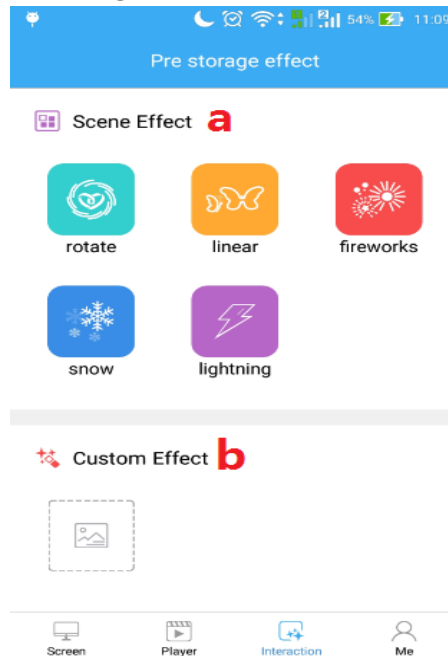

a: Enter the interface of interactive animation .

b: Edit photos \ Sand gif dynamic diagram\Take photos \
Take videos .


7.2 Interactive animation



a: Drag the ball picture to **b** and release ,that would be success .

c: The animation playback time . Click to the red clock on the left will pop up this interface .

7.3 Photo editor

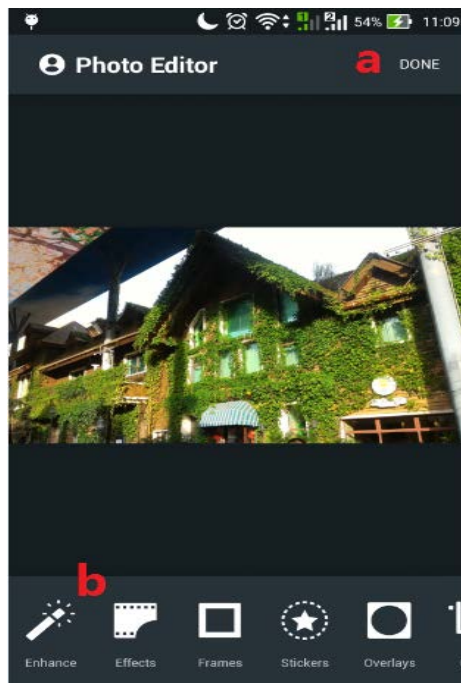


a : Storage to the local and display the preview .

b: Tools of photos editor .

<http://www.ydeachn.com/>

8 My login screen

8.1 Me

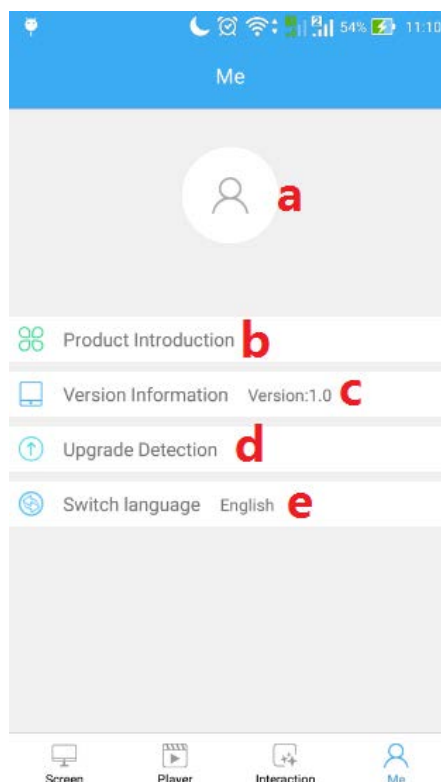

a: Click to a LOGIN interface .

b: Click to a product introduction interface .


c: Display current version of YClient .

d: Upgrade Detection .

Only connected with the external network can detect whether the current YClient 2 is the latest version .(If not ,the device will connect to the internet to download the latest version automatically .)

e: Switch language .Including Follow system \ Chinese \ English .

8.2 LOGIN

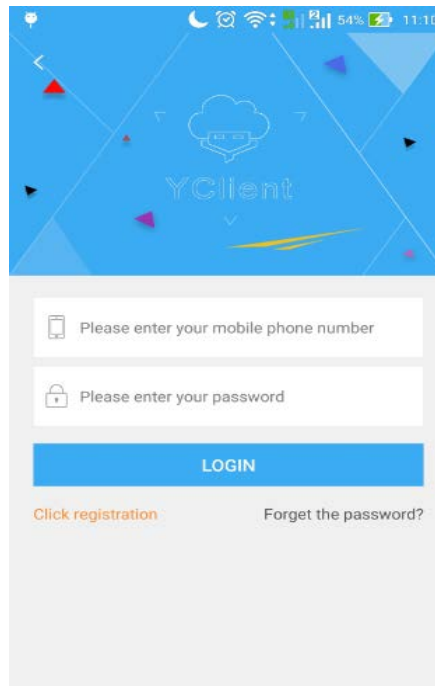

Notes : Registration of cloud accounts . The screen setting and program information would be recorded to this account . Sync data to the cloud .